

# Installation Instructions

## MARLOW GATE

Tel: 01782 339348 Fax: 01782 339349

sales@centrewire.com

www.centrewire.com

Mossfield Road, Adderley Green, Longton, Stoke-on-Trent, ST3 5BW



### Kit comprises of

H-frame to match gate

Gate leaf - 1.0m or 1.2m

We strongly advise the use of personal safety equipment where appropriate: gloves, glasses boots etc.

These gates are normally transported as one complete unit. For ease of handling and installation it is possible to detach the gate from its frame.

## INSTALLING THE GATE

Two Holes and a shallow trench are required. The trench should be deep enough for the bottom of the gate to be approximately 75mm above ground level. The cross bar must be level if the ground is uneven. It is possible to increase the height of the gate to match the adjoining fence but remember that if the cross bar is too close to ground level it may become a problem in wet weather on a busy path.

Check level and vertical alignment of the frame before filling the holes and trench with rubble and/or concrete.

Position the gate squarely between the frame upright by adjusting the gate eye.

## COMPLETION

Check the alignment of the gate and adjust the gate eye if necessary.

Check that all nuts are tight.

Remove any rough patches of zinc with a file or sandpaper.

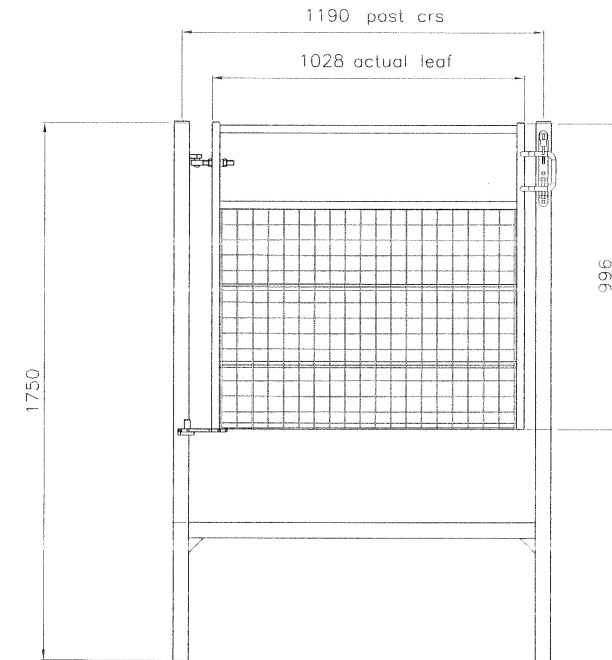


illustration showing 1.0m gate

Gate height out of ground  
is normally 1.0m - 1.1m



If you need any further advice/guidance regarding the installations of any of our products please contact the office.

**Centrewire**<sup>®</sup>